




 



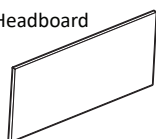 
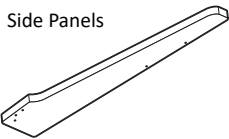 
 
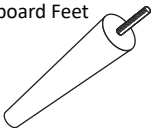 
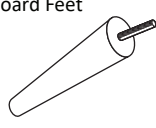 


 
Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Bob's Discount Furniture is designed for residential use only.

CODE	QTY	HARDWARE
1	8	M8*40 Bolts 
2	4	M8*57 Bolts 
3	4	M8*65 Bolts 
4	18	M8 Spring Washers 
5	18	M8 Flat Washers 
6	1	5# Allen Wrench 
7	2	Nuts 
8	1	14# Open Wrench 
9	2	M8 Flat Washers big diameter 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard 	B	2	Side Panels 
C	1	Footboard 	D	2	Headboard Feet 
			E	2	Footboard Feet 

## ⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

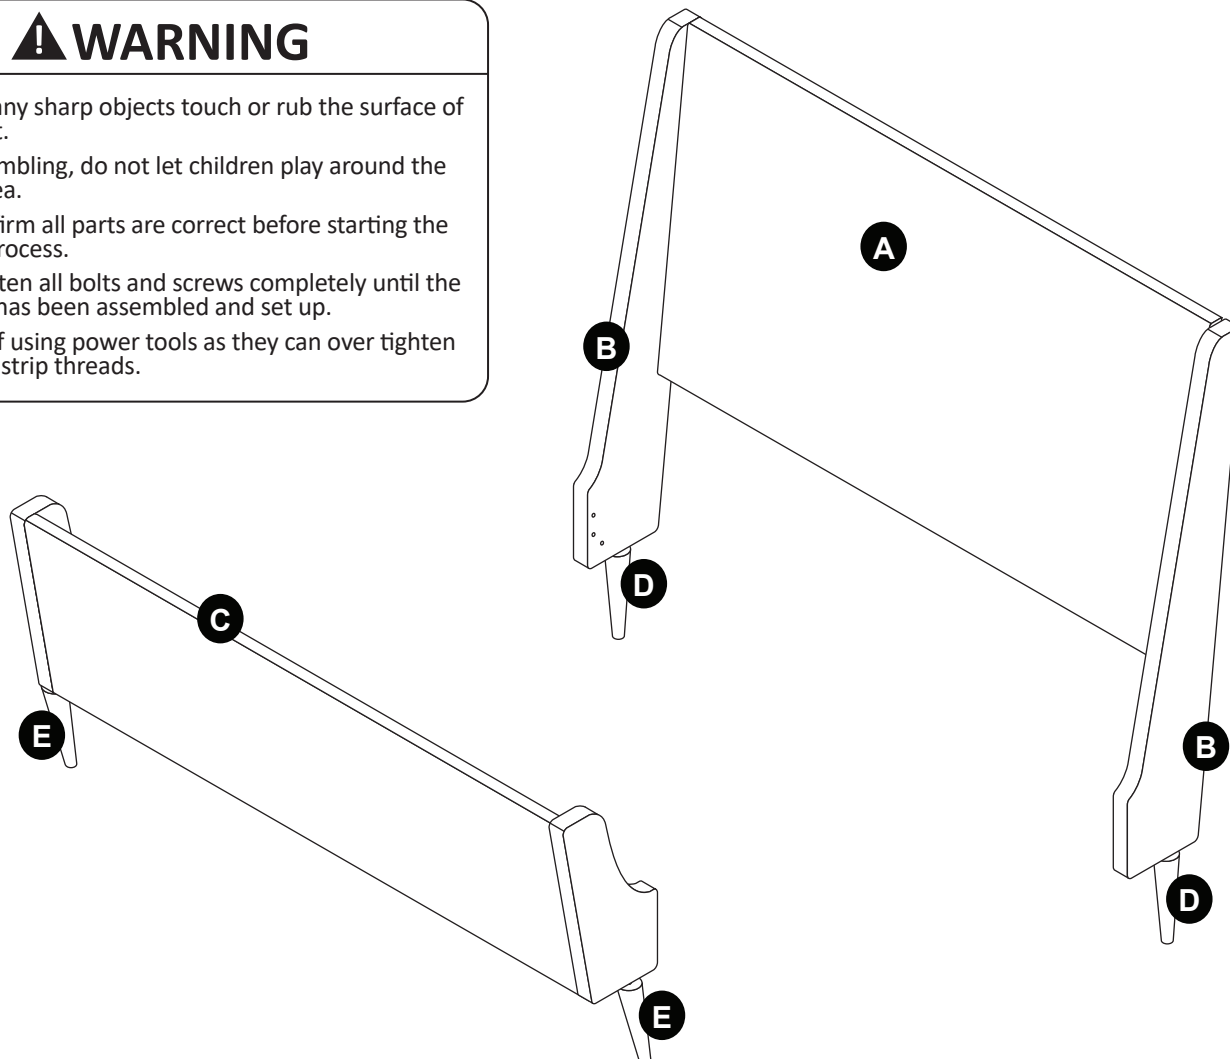 


## STEP 1 - Figure 1

Begin assembly by attaching Side Panels (B) to Headboard (A) using 2 Allen Bolts (2), 2 Spring Washers (4) and 2 Flat Washers (5) on each side from the back.

## STEP 2 - Figure 1

Attach Headboard Feet (D) to Headboard (A) by screwing tightly into place.

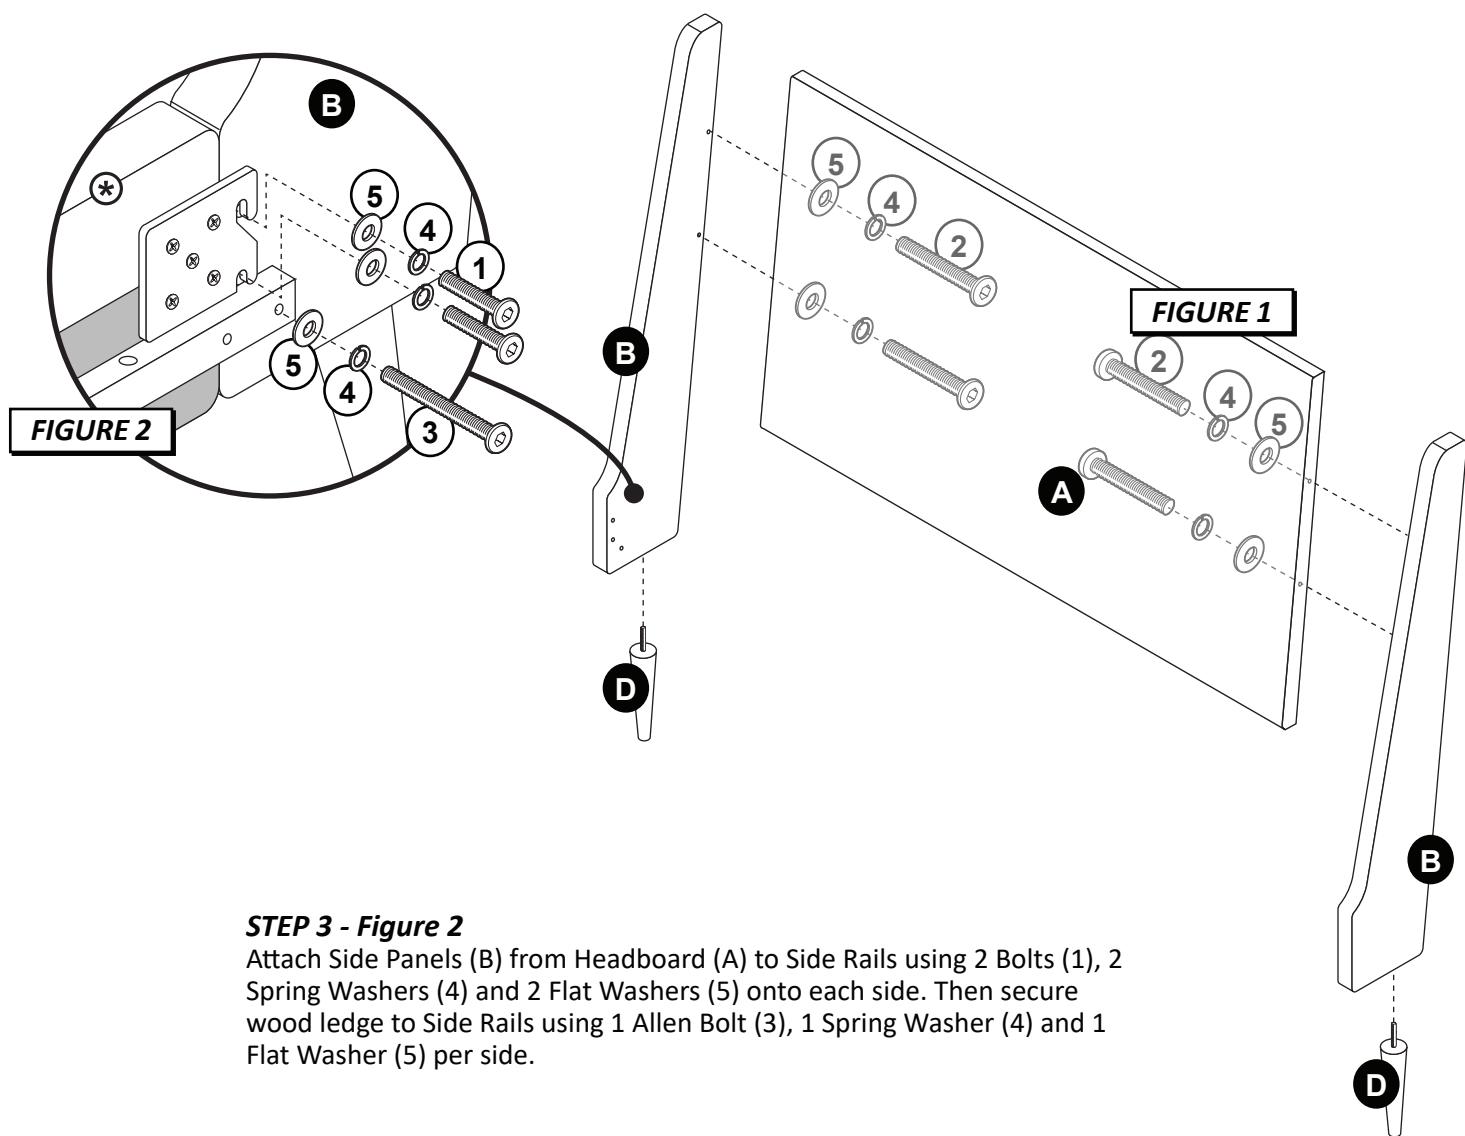 


## STEP 3 - Figure 2

Attach Side Panels (B) from Headboard (A) to Side Rails using 2 Bolts (1), 2 Spring Washers (4) and 2 Flat Washers (5) onto each side. Then secure wood ledge to Side Rails using 1 Allen Bolt (3), 1 Spring Washer (4) and 1 Flat Washer (5) per side.

 
## STEP 4 - Figure 3

Attach Footboard Feet (E) to Footboard (C) by inserting through hole in bottom and securing from inside window with 1 big Flat Washer (9), 1 Spring Washer (4), and 1 Nut (7) per foot. Tighten nut with Open Wrench (8).

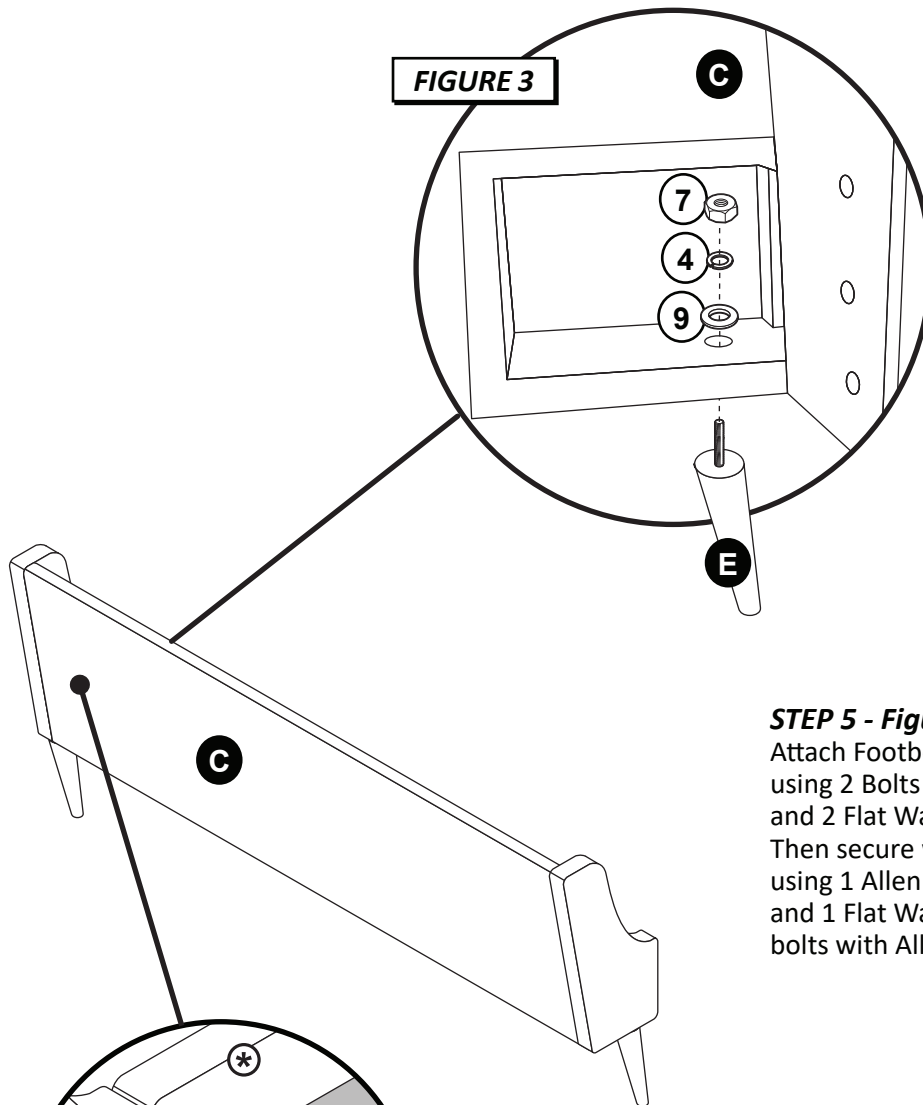


 


## STEP 5 - Figure 4

 
 
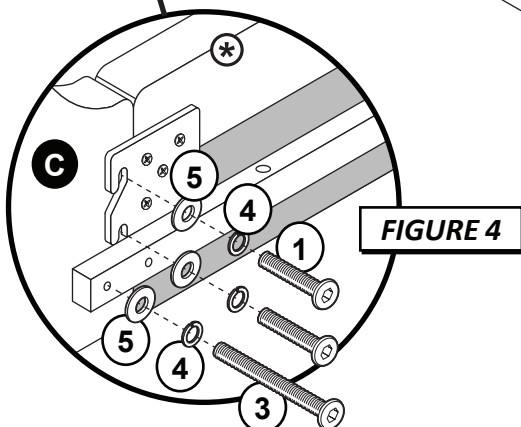 
Attach Footboard (C) to Side Rails using 2 Bolts (1), 2 Spring Washers (4) and 2 Flat Washers (5) onto each side. Then secure wood ledge to Side Rails using 1 Allen Bolt (3), 1 Spring Washer (4) and 1 Flat Washer (5) per side. Tighten all bolts with Allen Wrench (6) provided.



**Side Rails \*** not included.  
Sold separately.

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Bob's Discount Furniture is designed for residential use only.

CODE	QTY	HARDWARE
1	3	M8*40 Allen Bolts 
2	6	4*30 Screws 
3	1	Ø5 Allen Wrench 
4	3	Adjustable Feet 

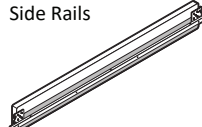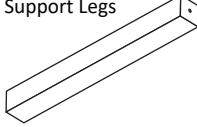CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	2	Side Rails 	B	3	Slats 
C	3	Support Legs 			

## ⚠ WARNING

 
- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

### STEP 1 - Figure 1

Begin assembly by attaching the Adjustable Feet (4) to the Support Legs (C) by screwing them into place.

### STEP 2 - Figure 2

Next attach the Support Legs (C) to the Slats (B) using 1 Allen Bolt (1) from the top of each slat. Tighten bolts with Allen Wrench (3) provided.

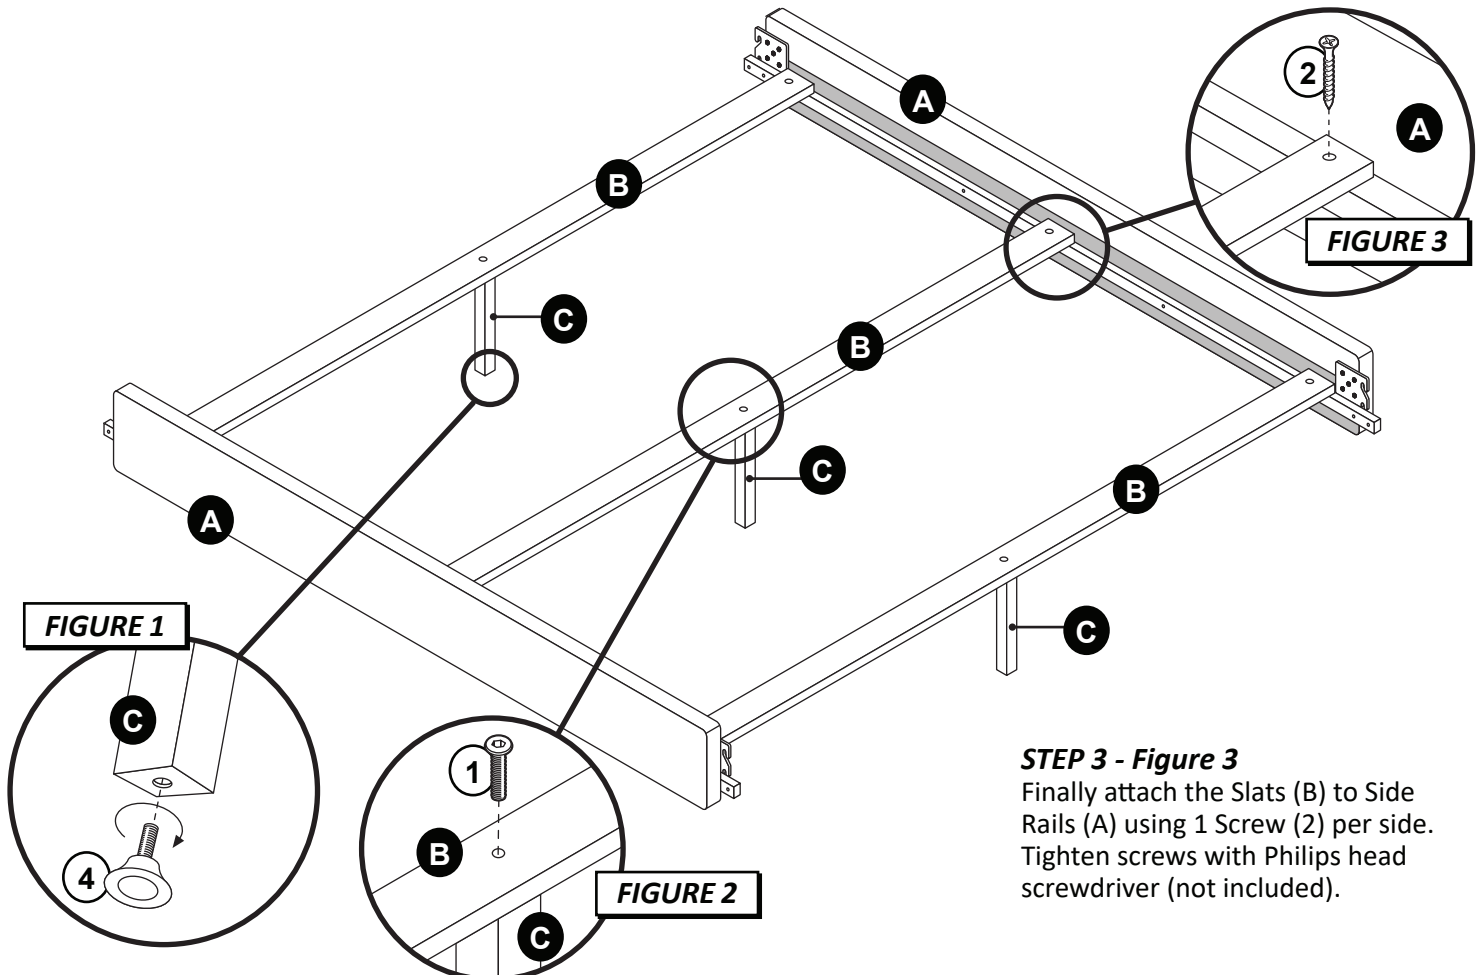

### STEP 3 - Figure 3

Finally attach the Slats (B) to Side Rails (A) using 1 Screw (2) per side. Tighten screws with Philips head screwdriver (not included).



**WARNING: To avoid serious personal injury:**

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.